



ECT/PN

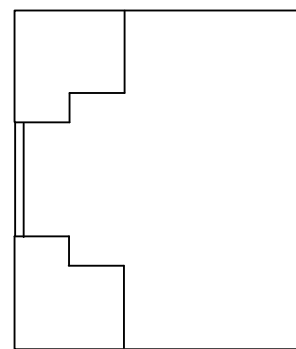


EtherNet

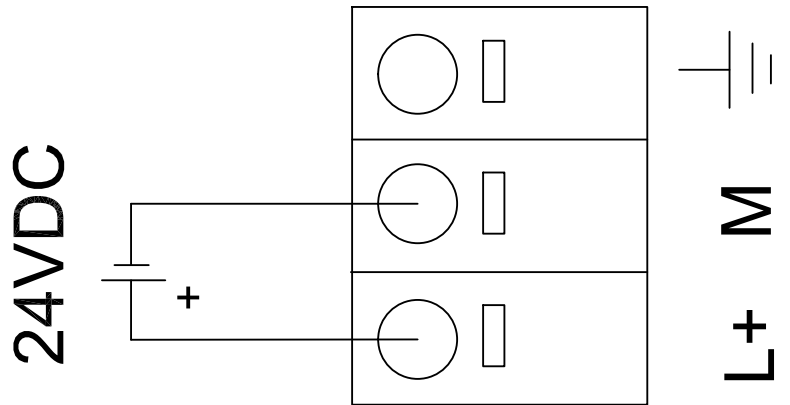

- PWR ☐
- RUN ☐
- STOP ☐
- ERR1 ☐
- PWR ☐
- SF ☐
- BF ☐
- ERR2 ☐


- LINK1 ☐
- ACT1 ☐
- LINK2 ☐
- ACT2 ☐

- ☒ RUN
- ☐ STOP

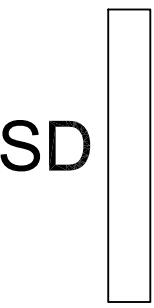


USB

COM1  
RS485

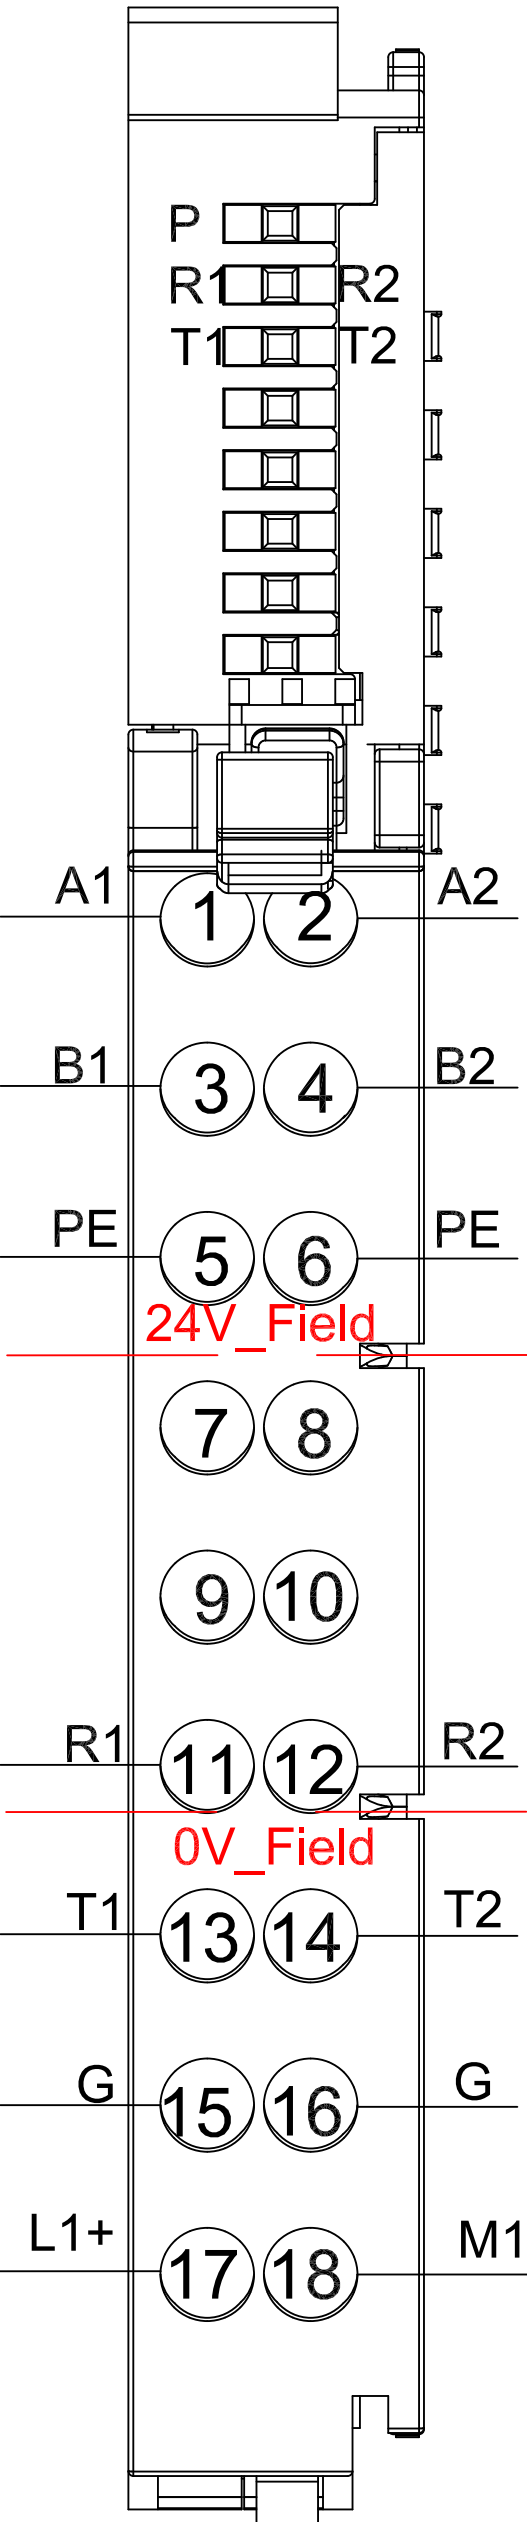

COM2 RS485

COM1  
RS232

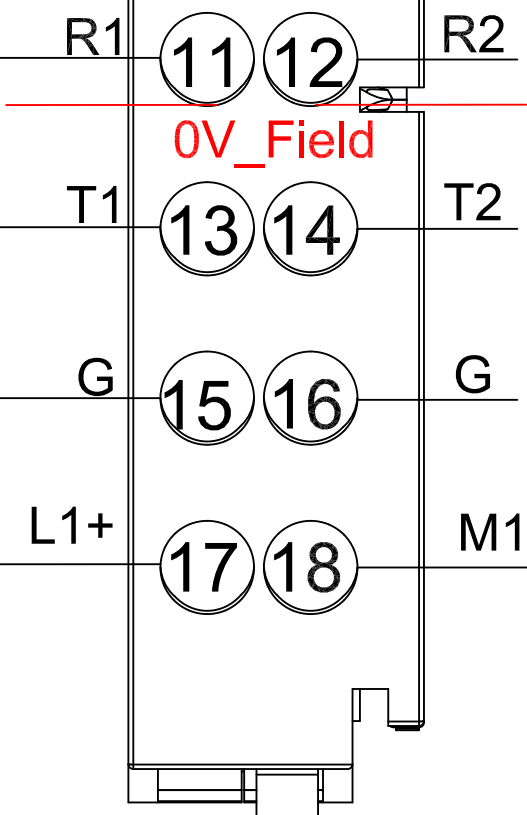

COM2 RS232

24V DC